 




Dell Chromebook 11 Model 3180 Battery Replacement

This guide will show you how to replace the battery.

Written By: Jon

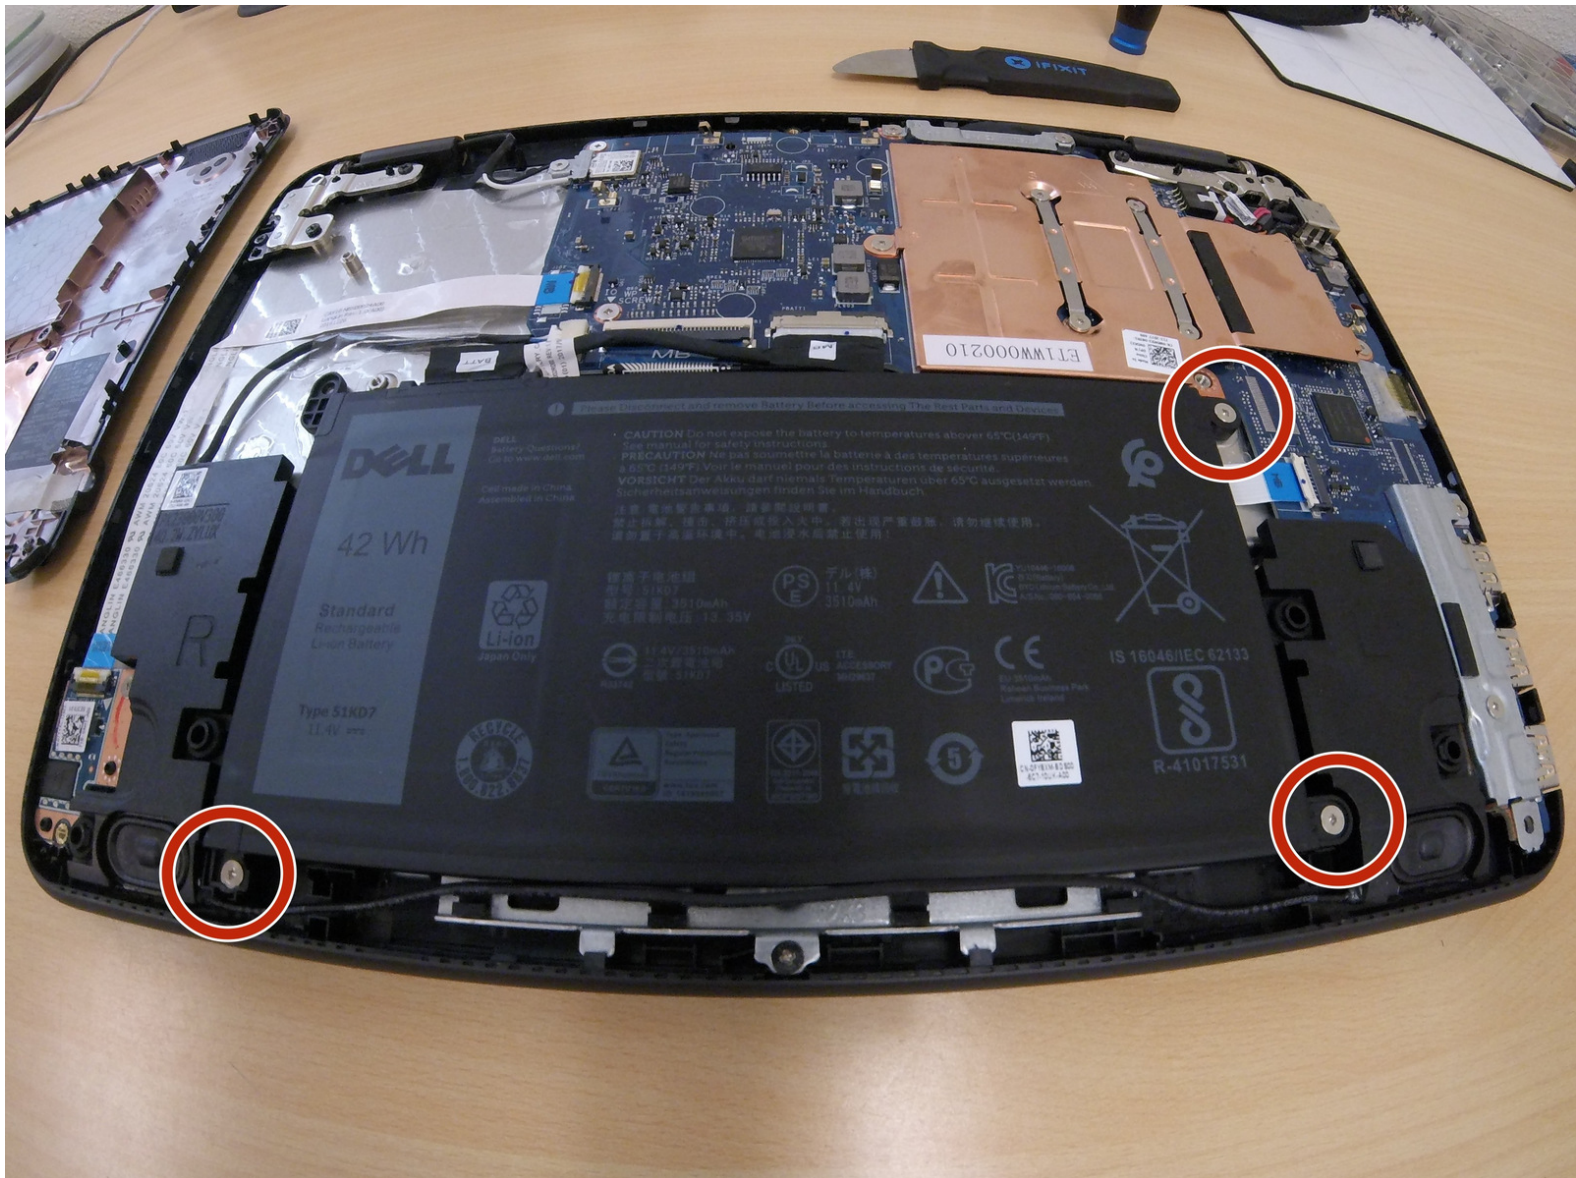



TOOLS:

 
- [Phillips #0 Screwdriver](#) (1)
- [Plastic blade](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [42Wh Dell Battery Type 51KD7](#) (1)

Step 1 — Remove Bottom Cover / Shell

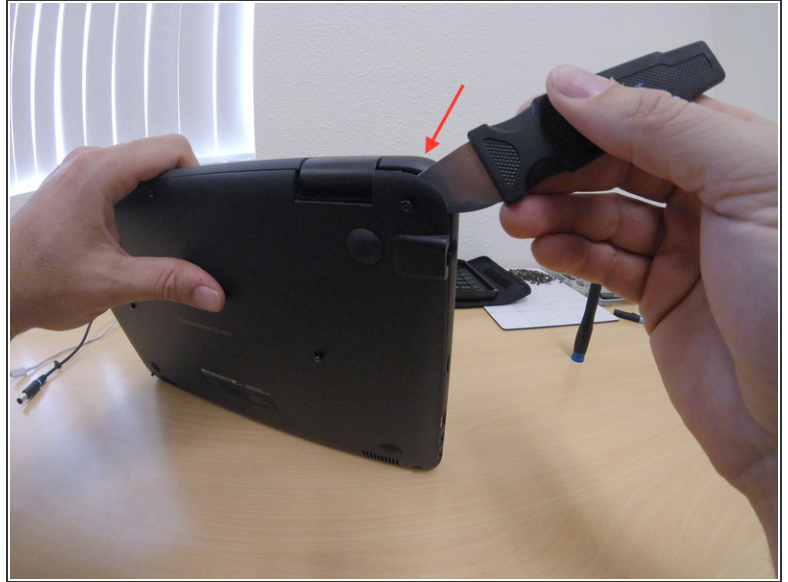

- Remove the 7 screws from the back cover with a Phillips #0 screwdriver
- Once all 7 screws have been removed, you can start to pry apart the back cover with your Plastic Blade or your fingers. Then you can start to separate the back cover from the main chromebook. (See pic)

 Step 2 — Remove Battery Screws

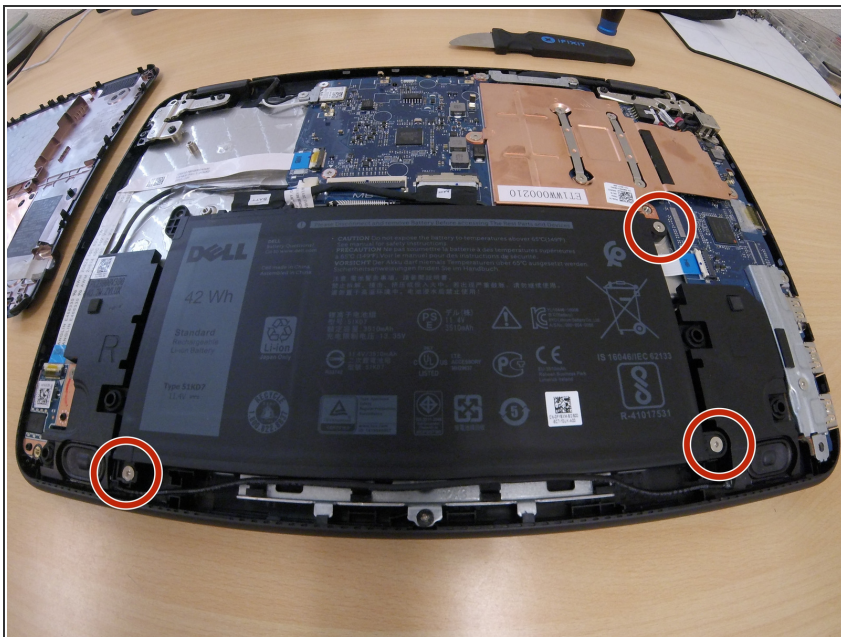

- Remove the 3 battery screws with a Phillips #00 screwdriver.

Step 3 — Remove Battery



- Remove the battery from the motherboard extension connector

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-14 02:30:52 PM.